 


Using the Classroom Touch screen

 
1. [Touch Panel](#)
2. [DVD Player](#)
3. [VCR](#)
4. [Laptop](#)
5. [Lectern Computer](#)
6. [Document Camera](#)
7. [Cable TV](#)
8. [Aux Video](#)
9. [Blank Screen](#)

The Touch Panel:

1. Wake up system by firmly touching screen
2. To begin using the system, follow the written advice, and “Touch Here to Begin”

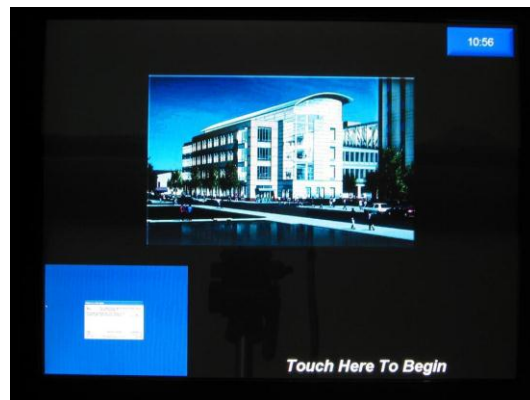

Three Main Parts of the Screen

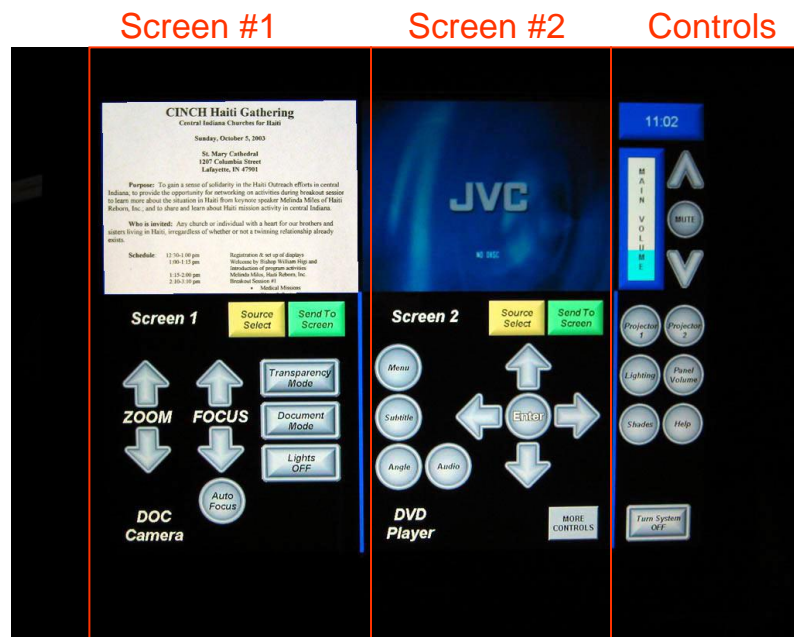

Screen #1

Controls for the left projector
(from student's)

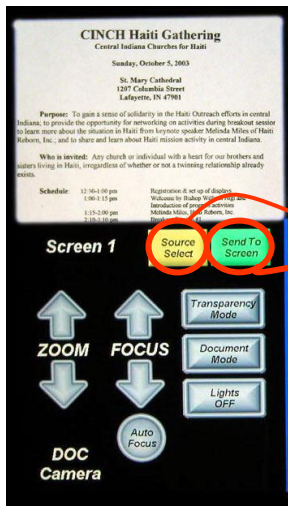 


Image of content to be displayed

Source

Send Source to

Controls for that input

Screen #2

Controls for the right projector
(from student's perspective)

Exactly the same as for Screen #1

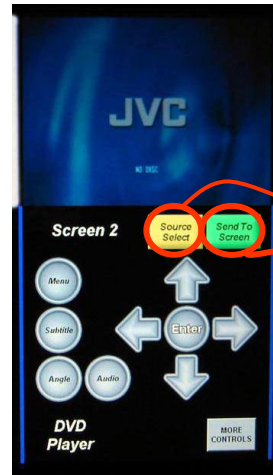 


Image of content to be displayed

Source Selection

Send Source to Projector

Controls for that input

Extra Controls

The right panel contains some additional basic controls such as:

 


- Main Volume (audience)
- Individual projector power on/off
- Lighting controls
 - (same options as on the wall panel)
- Panel Volume
 - (controls the previewed volume on the lectern only)
- Shades Lower/Raise

The DVD Player:

The DVD player is located above the Desktop Computer.


1. Power on the DVD player.
2. Insert a DVD into the player.

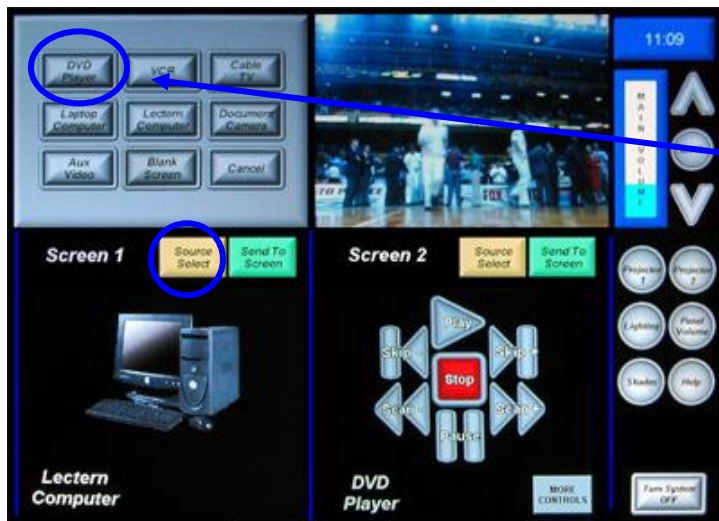

3. On the Touch Panel, push **Source Select** and choose **DVD Player**. You can control the DVD player from here.
4. Push **Send to Screen** to display the DVD on the left Projector. *If you would like the DVD to be displayed on both Projectors, repeat this selection process for the second screen.*

The VCR:

 1. The VCR is located above the DVD player. Power on the VHS player.
2. Insert a VHS into player.

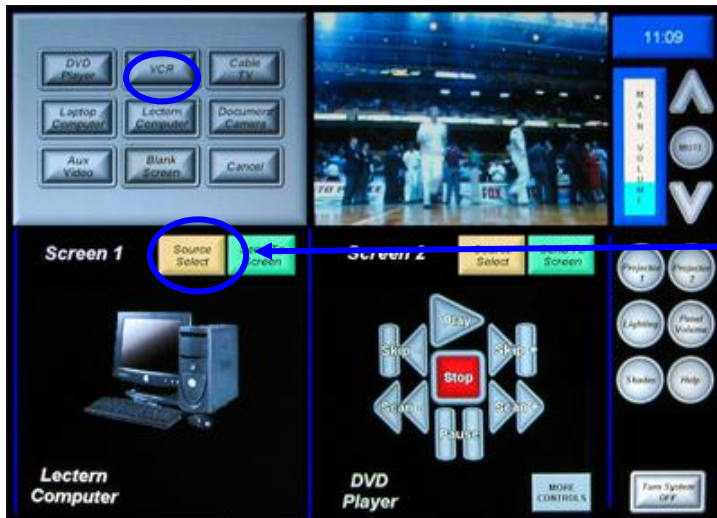


3. On the Touch Panel, push **Source Select** and select **VCR**. You can control the VCR from here.
4. Push **Send to Screen** to display the VCR on the left Projector. *If you would like the VCR to be displayed on both Projectors, repeat this selection process for the second screen.*

Connecting a Laptop:

1. A **VGA computer cable** with minijack sound is also available behind the touch panel, as is a **network connection and power outlet** (on the Aux panel).




 2. If you would like sound, the cable should also have a **Mini-jack connector** with the cable to provide sound. Plug it into the laptop headphone jack. *Note: Check the settings on your laptop to ensure it is set for external viewing.*
3. On the Touch Panel, push **Source Select** and select **Laptop** to display the laptop on the Plasma screen. *If you would like the Laptop to be displayed on both sources, repeat this selection process for the second screen.*

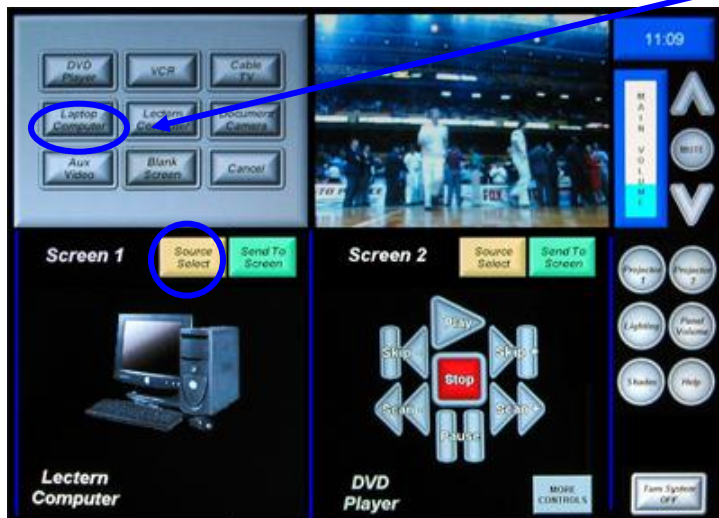


Lectern Computer:

 1. On the Touch Panel, push **Source Select** and select **Lectern Computer**.
2. Push **Send to Screen** to display the Lectern Computer on the left Projector. *If you would like the Lectern Computer to be displayed on both Projectors, repeat this selection process for the second screen.*

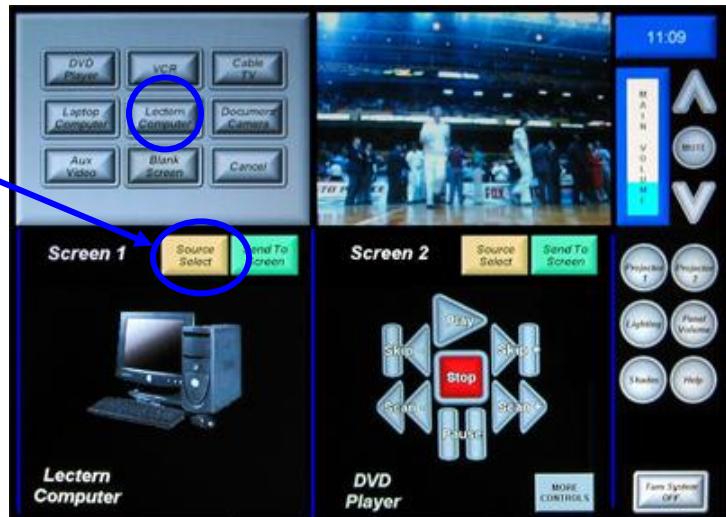


 3. Be sure to log off your account in order to prevent the next user from accessing your account.

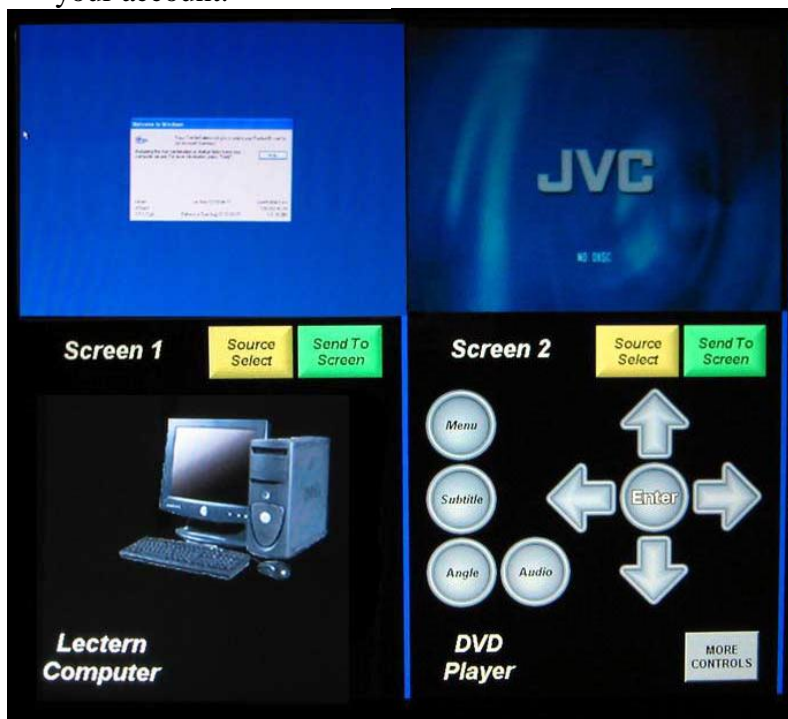

Document Camera:

 1. On the Touch Panel, push **Source Select** and select **Document Camera**.
2. Push **Send to Screen** to display the Document Camera on the left Projector. *If you would like the Document Camera to be displayed on both Projectors, repeat this selection process for the second screen*

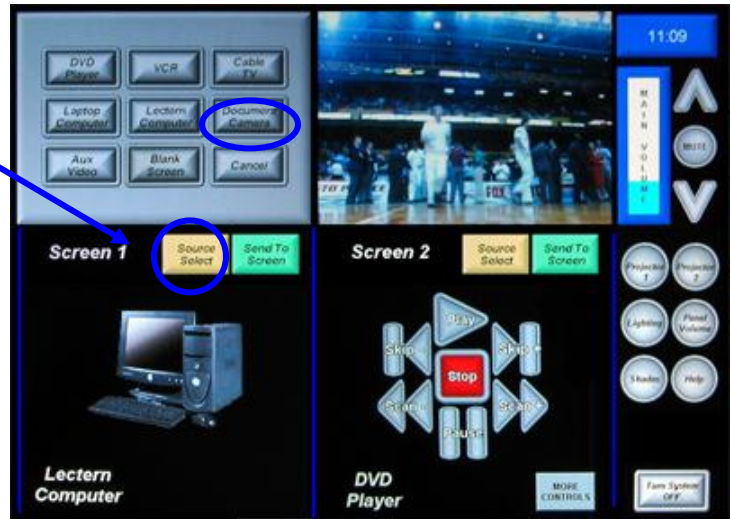

When Projecting Text

Make sure it's big enough!!!

 
Any Computer Source can be used, for example:
Word, Excell, PowerPoint, Web, etc

Any Printed Material can be used, for example:
Handouts ,textbook copies, charts, graphs, spreadsheets


Absolute smallest font you should use is 16 pt.
(18pt is preferable).

Cable TV:


1. On the Touch Panel, push **Source Select** and select **Cable TV**
2. Push **Send to Screen** to display the Cable TV on the left Projector. *If you would like the Cable TV to be displayed on both Projectors, repeat this selection process for the second screen*

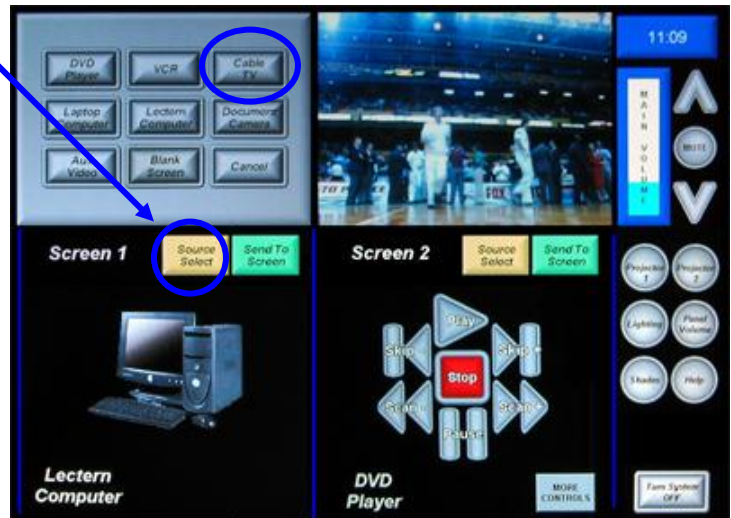

CABLE TV CONTROLS

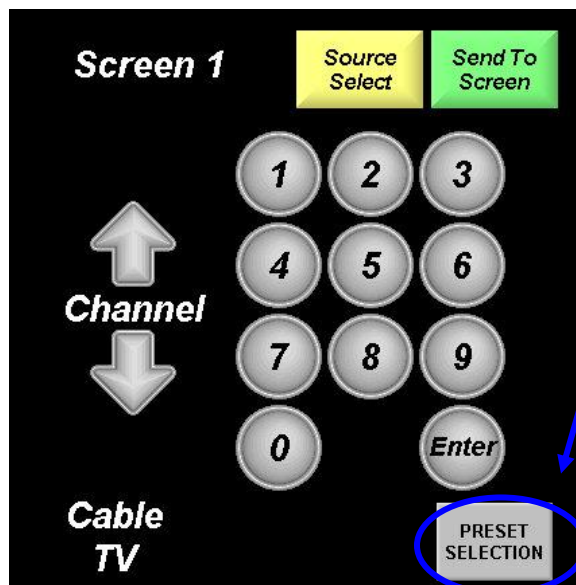 


CABLE TV PRESETS

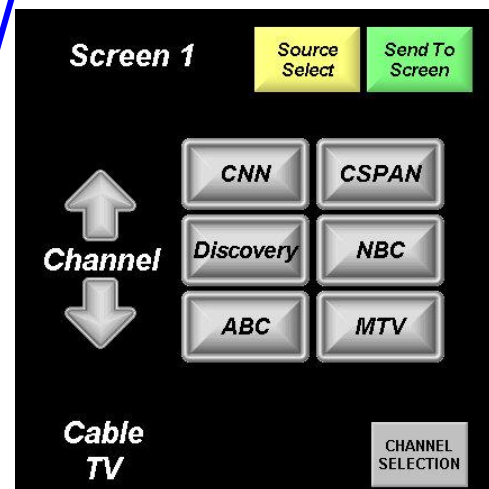 

AUX VIDEO:

 Auxiliary Video Sources may be plugged into the system with RCA cables pictured below. The source may be an additional VCR, DVD player, etc.

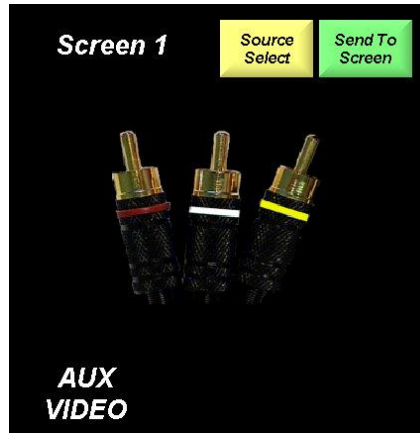

Blank Screen:

1. On the Touch Panel, push **Source Select** and select **Blank Screen**
2. Push **Send to Screen** to display the Blank Screen on the left Projector. *If you would like the Blank Screen to be displayed on both Projectors, repeat this selection process for the second screen*

